

Images here are just for your reference only.

09AP034990+ size code URETHANE CUSHION (2 pcs)




- To improve driving comfort when passing through speed bumps and uneven roads
- To reduce fatigue during long distance driving with cushion improvement
- To improve driving more stabilized with restoration of car height
- To prevent leaning (to one side) during sharp curve corner with coil spring tension control
- To protect shock absorber from shocks

Size Code

- B (B+) C (C+) D (D+)
E (E+) F (F+)

● Urethane buffer self measuring chart ●

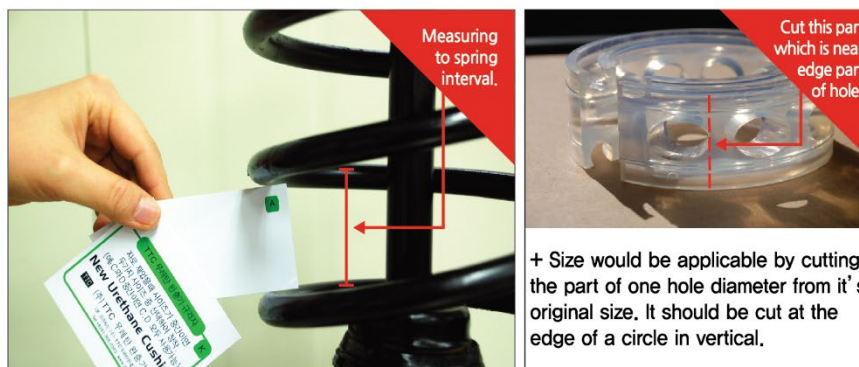

- ① Measure in the condition of no one inside car
- ② Measure each height of coil spring with the measuring gauge or a ruler as the above photo.
- ③ Measure one front and rear size each. 2 front or 2 rear butters are a pair.

TYPE	Height
K+	68mm (±5mm)
S+	58mm (±5mm)
A+	48mm (±5mm)
B+	38mm (±5mm)
C+	28mm (±5mm)
D+	21mm (±5mm)
E+	15mm (±5mm)
F+	13mm (±5mm)



**Rexton
New Rexton**

F F+
R B+



**Rexton W
Multi Link**

Rigid type
F D+/ C+
R F+/ B+



**Rexton II
Multi Link**

F F+
R F+



**Musso
MUSSO sports**

F -
R B+



**Actyon
Actyon sports**

F F+
R B+



Korando Old

F -
R B+



**Korando
New Korando**

(2WD) (4WD)
F B+ /B+
R C+ / D+



**New Actyon
Sports**

F D+ / E+
R B+



**Rodius
(4WD)**

F F+
R F+ / D+



**Rodius
(2WD)**

F E+
R D+



Kyron

F F+
R B+



Rodius

F F+
R F+



Chairman

F F+
R F+



**Chairman
W**

F D+
R F+

Please check the **model** (model/2WD/4WD) and **table** always before product ordering